



Top view

crank 1

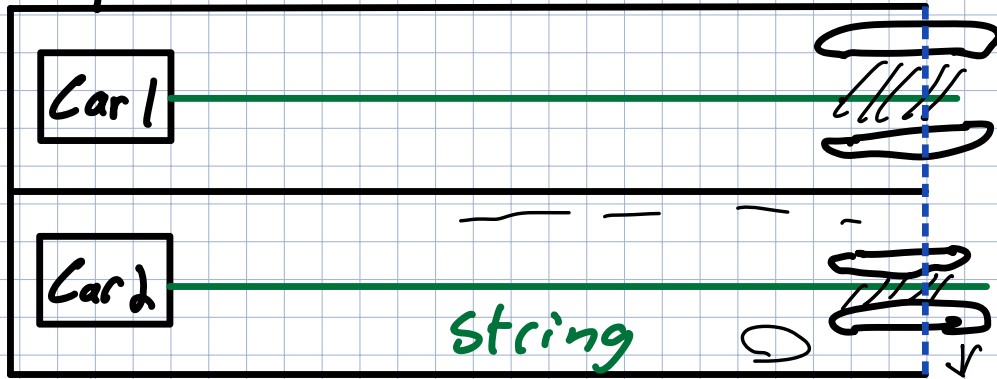


Pulleys

crank 2

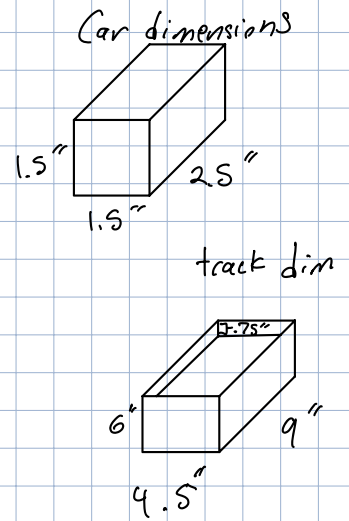


side view

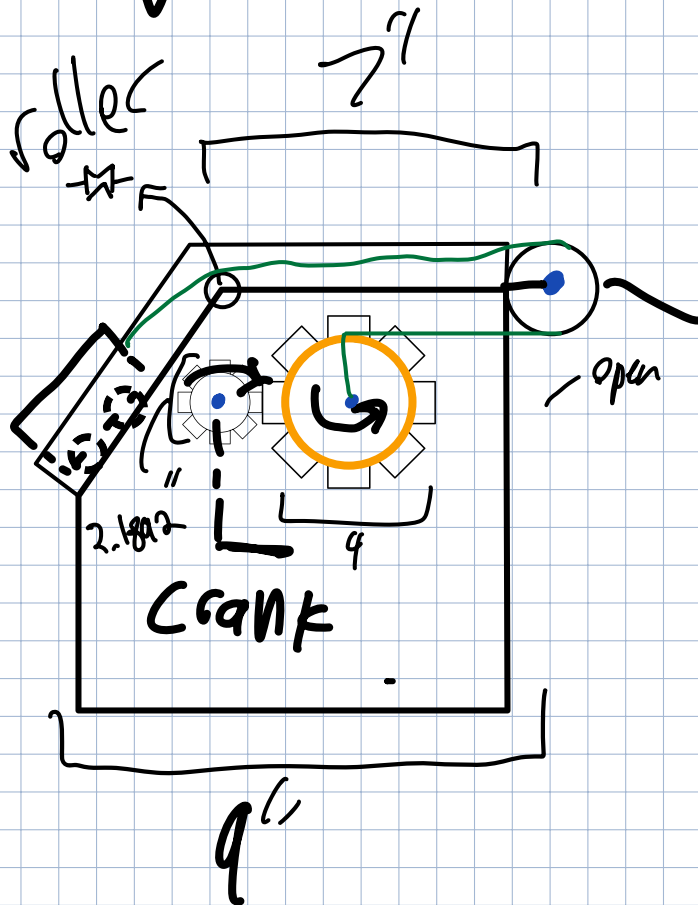

pulley


- = string
- = spool
- = Axle

Spool top view

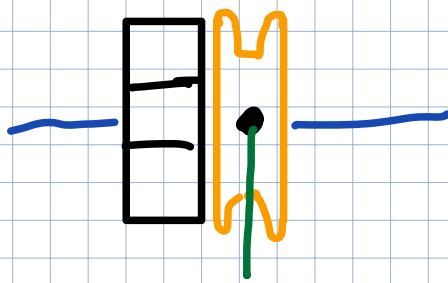


Spool is only connected to axle when dowel is inserted.
This way, at the end of the race, one can remove the dowel & unwind the spool without moving the gear train.

Dowel

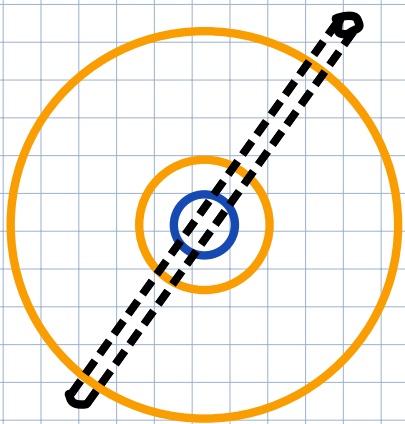

Axle top view

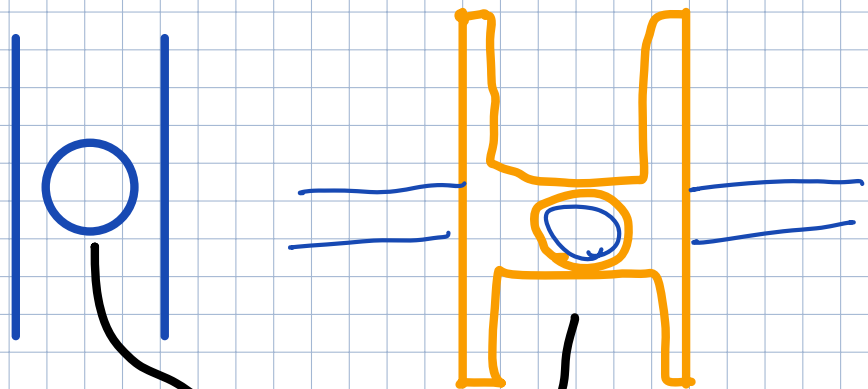

Hole for removable Dowel