



Printing on the P800

Always print out of Photoshop for the best control of scaling and color.

With your image open in Photoshop, resize the image by going to **Image > Image Size** (keyboard shortcut: *Option + Command + I*). Images for printing should have a Resolution of **300 PPI** (pixels/inch) or above. PPIs greater than 720 will automatically be scaled down by the printer.

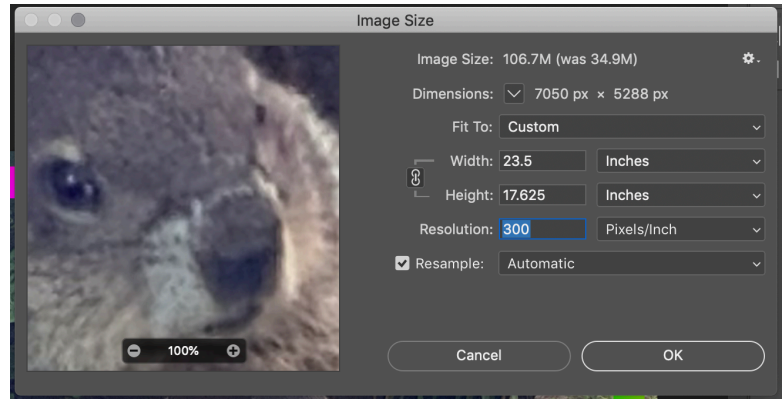


When your image is ready to print, go to **File > Print** (keyboard shortcut: *Command + P*) and the following window will pop up:

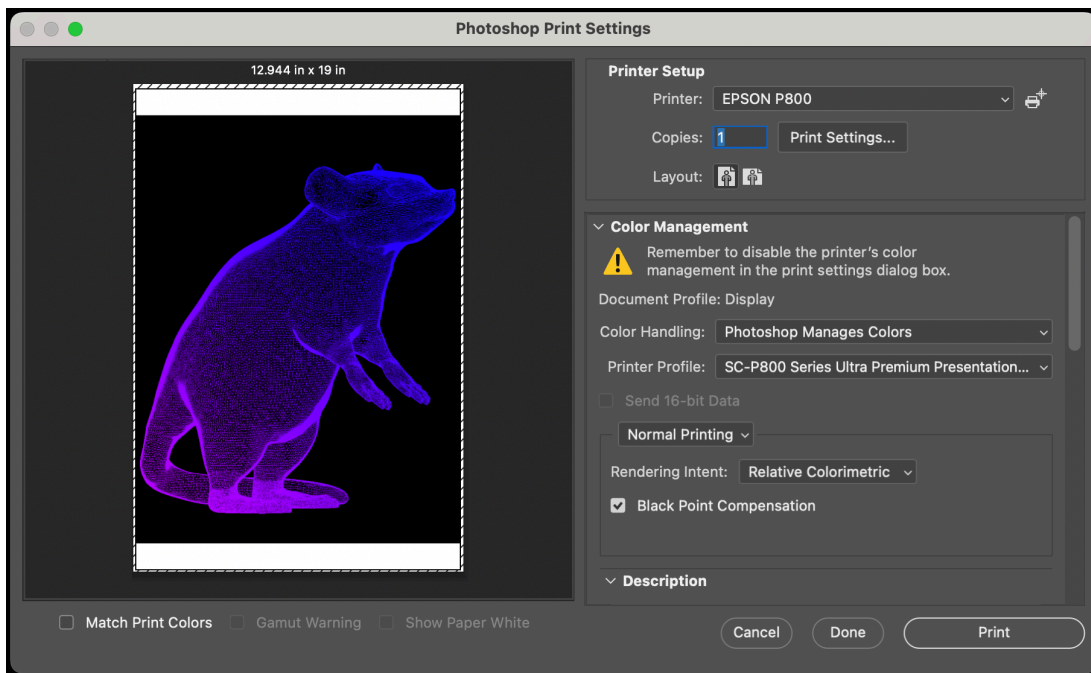

- Check that the **Printer** option is set to the correct printer.
- **Color Handling** should be set to **“Photoshop Manages Colors”**.
- **Printer Profile** will depend on your paper type. The name of the paper in the profile should match the name on the box of paper you’re using (i.e. Ultra Premium Presentation Matte, Premium Photo Paper Glossy, etc.) If no profile matches your paper, try using the **Wide Gamut RGB** setting (scroll to the bottom of the list). *If you forget to set the printer profile and it defaults to sRGB IEC61966-2.1 your print will be noticeably the wrong color.*
- **Black Point Compensation** should be checked and Rendering Intent should be set to **Relative Colormetric**.
- Click the button that says **“Print Settings”** (at the top of the window).

Guide continues... →

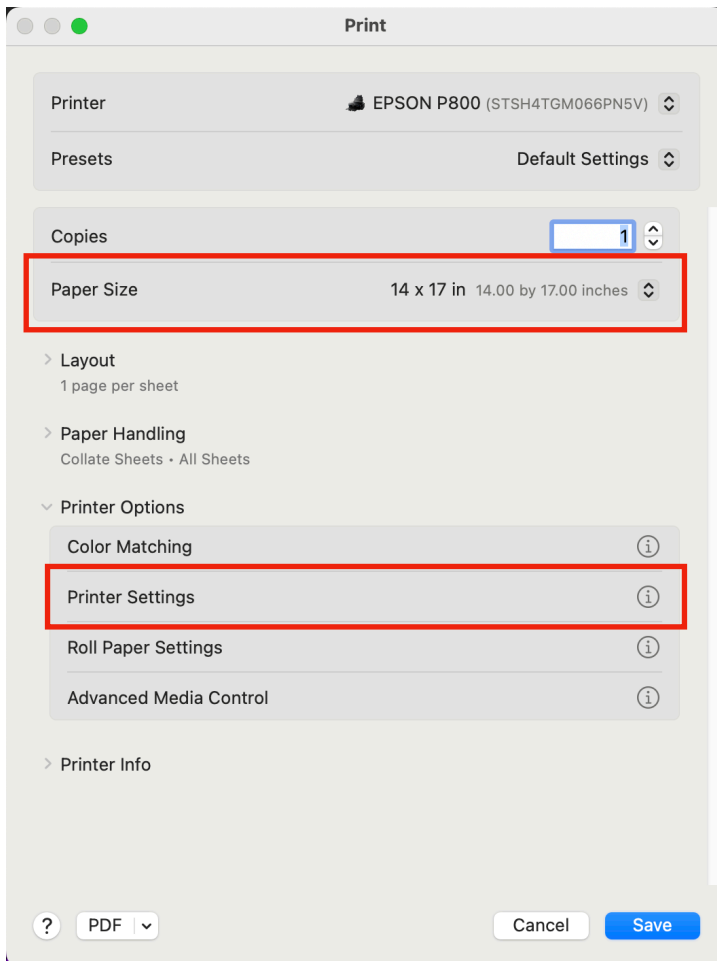

When you select “Print Settings” in the first window, the following window will pop up.


- Choose your **Paper Size** from the drop down list. Some papers will have options for Borderless printing.

↳ **Borderless Auto-Expand** will enlarge the image slightly to ensure it runs off the edges of the paper.

↳ **Retain Size** will preserve the original dimensions of the image, but may leave a slight border if the paper is loaded crooked.

- The printer does not support borderless printing for all paper sizes.

- Under **Printer Options**, click **Printer Settings**.

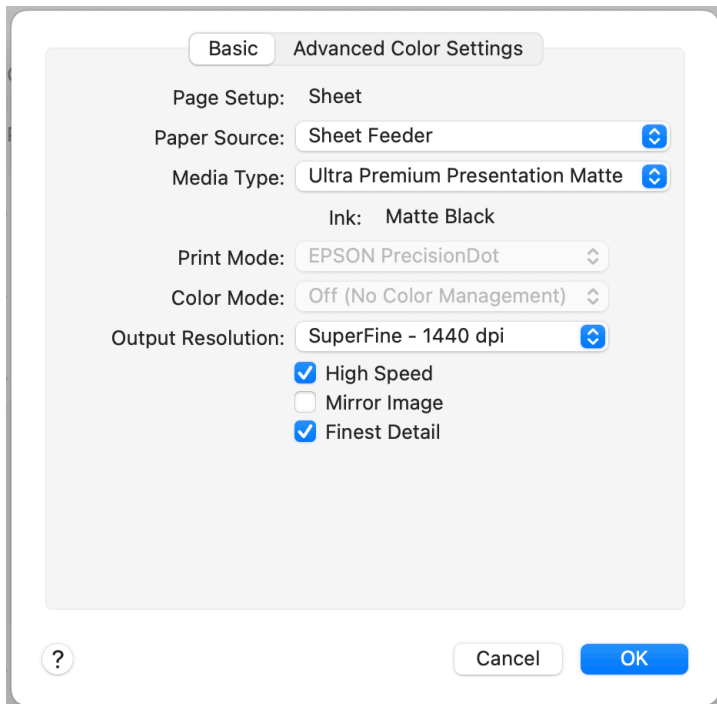

- For most papers, the **Paper Source** should be set to **Sheet Feeder**. For very heavy-weight papers, you may need to change to Manual Feed tray.

- The **Media Type** is the kind of paper you’re using. If you are using paper that is not Epson brand, check the instructions that came with your paper to find out what settings to use.

- Choose your **Output Resolution**. Lowering the resolution will allow you to print faster, but the image quality will be worse.

- **High Speed** can usually stay checked. If you notice color banding in your prints, try turning it off. (And try running a cleaning cycle.)

- **Finest Detail** helps keep sharp edges. It should be used for graphic design, but not photography.

- Hit **OK** in this window, and hit **Save** in the previous window. Check the print preview in the main print window, then hit **Print!**

ALWAYS DOUBLE CHECK THE PRINTER SETTINGS BEFORE PRINTING.

If you change anything in your file (or change the paper size), double check the settings. Even if printing multiples of the same file, check the printer settings between prints. The settings will sometimes return to the Default settings without warning.